


## Montage of a coupler C2

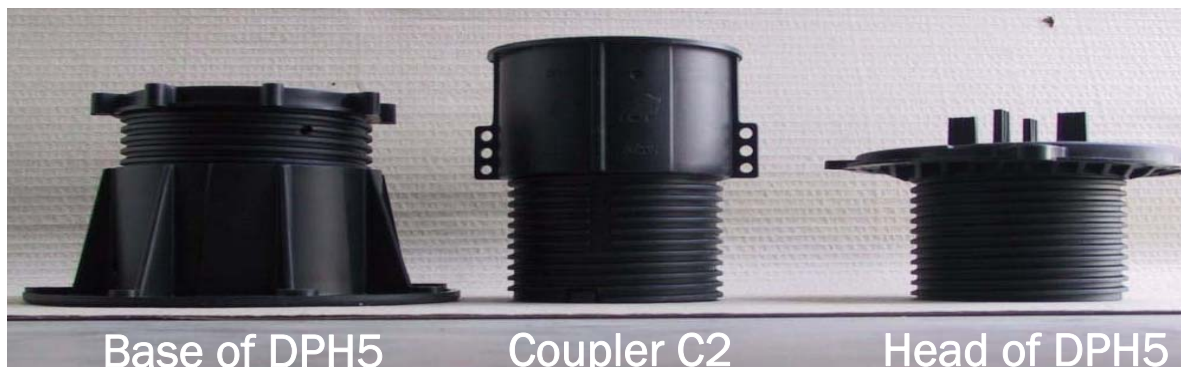

Base of DPH5

Coupler C2

Head of DPH5



### 1st step:

Screw the coupler into the base of the pedestal DPH5 at least 4 full turns that the maximum thread contact will be reached.



### 2nd step:

Screw the head of the pedestal DPH5 into the coupler at least 4 full turns that the maximum thread contact will be reached.



A pedestal DPH5 with 1 coupler is called then DPH6. This pedestal can reach heights from 170 up to 290 mm. Additional couplers can be screwed to reach heights up to 620 mm.